


# H124D ELECTRICAL WIRING (04/2005)

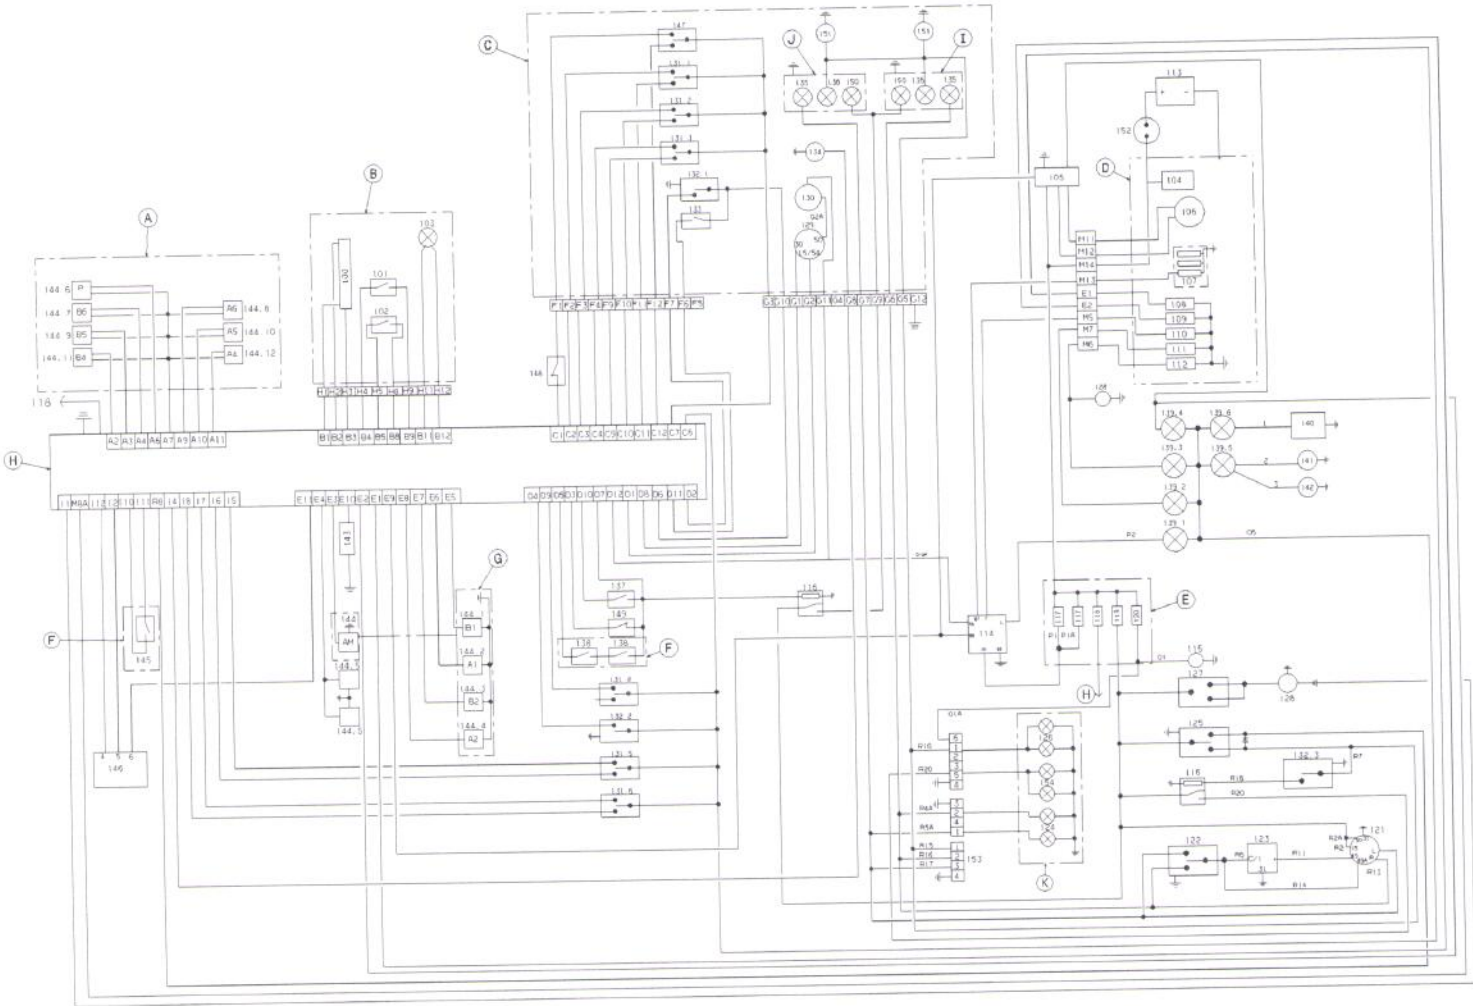

# H124D ELECTRICAL WIRING PARTS LIST

04/2005

Repere	Désignation	Observations
100	Hydraulic ram with sensor	
101	Mobile grassbox contactor	
102	Fixed grassbox contactor	
103	Flashing light	
104	Starter	
105	Regulator	
106	Alternator	
107	Glow plug	
108	Starter relay	
109	Fuel electrovalve	
110	Preheating temperature sensor	
111	Oil pressure sensor	
112	Cooling liquid temperature sensor	
113	Battery	
114	Preheating relay	
115	12 V DC plug	
116	12 V DC relay	
117	Fuse 25 A	
118	Fuse 15 A	
119	Fuse 20 A	
120	Breaker 15 A	
121	Warn lights unit	
122	Blinker switch	
123	Blinker unit	
124	Blinker	
125	Park lights / flashing light switch	
126	Park lights	
127	Horn switch	
128	Horn (near connecting 12 V DC)	
128'	Horn (console cover)	
129	Starter commutator	
130	Push button	since serial number 101363
131.1	Grassbox switch	
131.2	Flapper switch	
131.3	Power lift switch	
131.4	Differential lock switch	
131.5	Front power lift switch	
131.6	Front banking switch	
132.1	Blade clutch switch	

132.2	Front power switch	
132.3	Traffic beam lights switch	
133	Seat contactor	
134	Hour meter	
135	Rear indicators	
136	Rear lights	
137	Neutral point contactor	
138	Cutting deck side parts contactors	
139.1	Preheating control light	
139.2	Oil pressure control light	
139.3	Cooling liquid temperature control light	
139.4	Battery loading control light	
139.5	Oil control light	
139.6	Fuel level control light	
140	Fuel level sensor	
141	Thermocontact	
142	Clogging sensor	
143	Clutch	
144.1	Front power lift distributor coil +	
144.2	Front power lift distributor coil -	
144.3	Front banking distributor coil +	
144.4	Front banking distributor coil -	
144.5	Bobine diviseur de débit (2x)	Flow divider coil (2x)
144.6	Pression distributor coil	
144.7	Grasbox lift distributor coil -	
144.8	Grasbox lift distributor coil +	
144.9	Flapper distributor coil +	
144.10	Flapper distributor coil -	
144.11	Grasbox closing distributor coil	
144.12	Grasbox opening distributor coil	
145	Filling sensor	
146	Electrical ram	
147	Cutting height switch	
148	Cutting height cam switch	since serial number 100951
149	Park brake contactor	
150	Stop lights	since serial number 101101
151	Plate lights	since serial number 101101
152	Battery fuse	since serial number 101498
153	Towing bar wiring	
154	Traffic beam lights	since serial number 101101
A	Distributor wiring	
B	Grassbox wiring	
C	Central cover wiring	

D	Engine	
E	Fuse holder	
F	Cutting deck wirng	
G	Wiring distributor power	
H	Electrical module	
I	Back light right	
J	Back light left	
K	Front lights wiring	